

Yaskawa Parameter Modification Procedure

1. Press \vee until "PAr" is displayed
2. Press "ENTER".
 - a. The display will read "A1-01" with the "A" flashing.

Notes: * Only the flashing character can be changed with the \wedge / \vee buttons.

- * To move the flashing character to the right press "RESET"
- * To move the flashing character to the left press "ESC"
- * To accept a modified parameter press "ENTER"

3. Use the arrow keys to display the parameter to be modified, then press "ENTER".
 - a. The factory default value will be displayed.
4. Use the arrow keys to modify the parameter.
5. Press "ENTER" to save the change.
 - a. Display flashes "End".
6. When parameter modifications are complete, press and hold "ESC" until the Low Speed (Hz) is displayed "F 10.00"

| Description | Parameter | Preset Value |
|--------------------|-----------|--------------|
| Acceleration (sec) | C1-01 | 1.0 |
| Deceleration (sec) | C1-02 | 0.2 |
| Low Speed (Hz) | d1-01 | 10.0 |
| Incoming Power | E1-01 | 230 |

Determining Leveling Speed (ft/min) from Low Speed (Hz)


Par d1-01 = Desired Leveling speed (ft./min) / High Speed (ft./min) X 60

Example: Desired Leveling speed = 6 ft./min; High speed = 36 ft./min

$$\text{Par d1-01} = (6 / 36) \times 60$$

$$\text{Par d1-01} = 10$$

YASKAWA Keypad

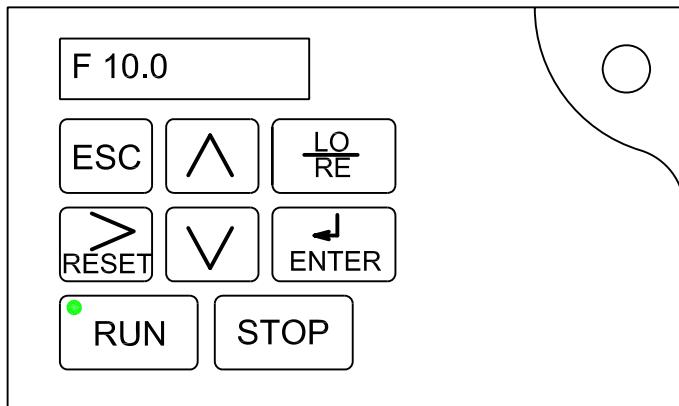

*** WARNING ***

DO NOT Modify any other parameters.
Failure to comply, can result in serious
injury or death.

Mod: VUBA0010FAA